



# Mn/DOT Video-Log User Manual



Report: MnDOT/OM-PM--2004-02

September 2004  
Office of Materials  
Pavement Management Unit

**USER MANUAL**

# Table of Contents

Launching the Application .....	1
The Image Window .....	2
Changing the Brightness and/or Contrast .....	2
Zooming into the Image .....	5
The Image / Location Window .....	7
Choosing Between Reference Post and True Miles .....	7
The Digitized Image Control Window .....	7
Viewing the Images .....	8
Changing the Viewing Interval .....	8
Changing Directions .....	9
Finding a Certain Location .....	9
Minimizing the Application .....	11
Closing the Application .....	11
Making Suggestions for Improvements .....	11

# User Manual for Mn/DOT Video-log System

## Launching the Application

Assuming the software has been installed correctly on your PC, you should see an icon on your desktop with a black crown in a red square as shown below:



Double click on the icon to launch the application. You will see a small rectangular box on the screen saying:

**“Pathview II Loading Road Section Records xxxx ”**

Where: xxxx is the record number being loaded from the database. In the statewide database there are approximately 27,000 records (approximately one per lane mile). In a district setup there will be approximately 4,000 records to load.


Once the data is loaded, the application will open and the last location displayed by any previous user will be shown. There are three windows in the application as shown below, the Image window, the Image/Location window and the Digital Image Control window. Each window can be resized and moved using the normal windows convention of dragging the mouse from one of the sides or corners.



Example of video-log application windows.

## The Image Window

The Image Window, as the name implies is where the images are shown. Normally both the front and side images will be displayed together.

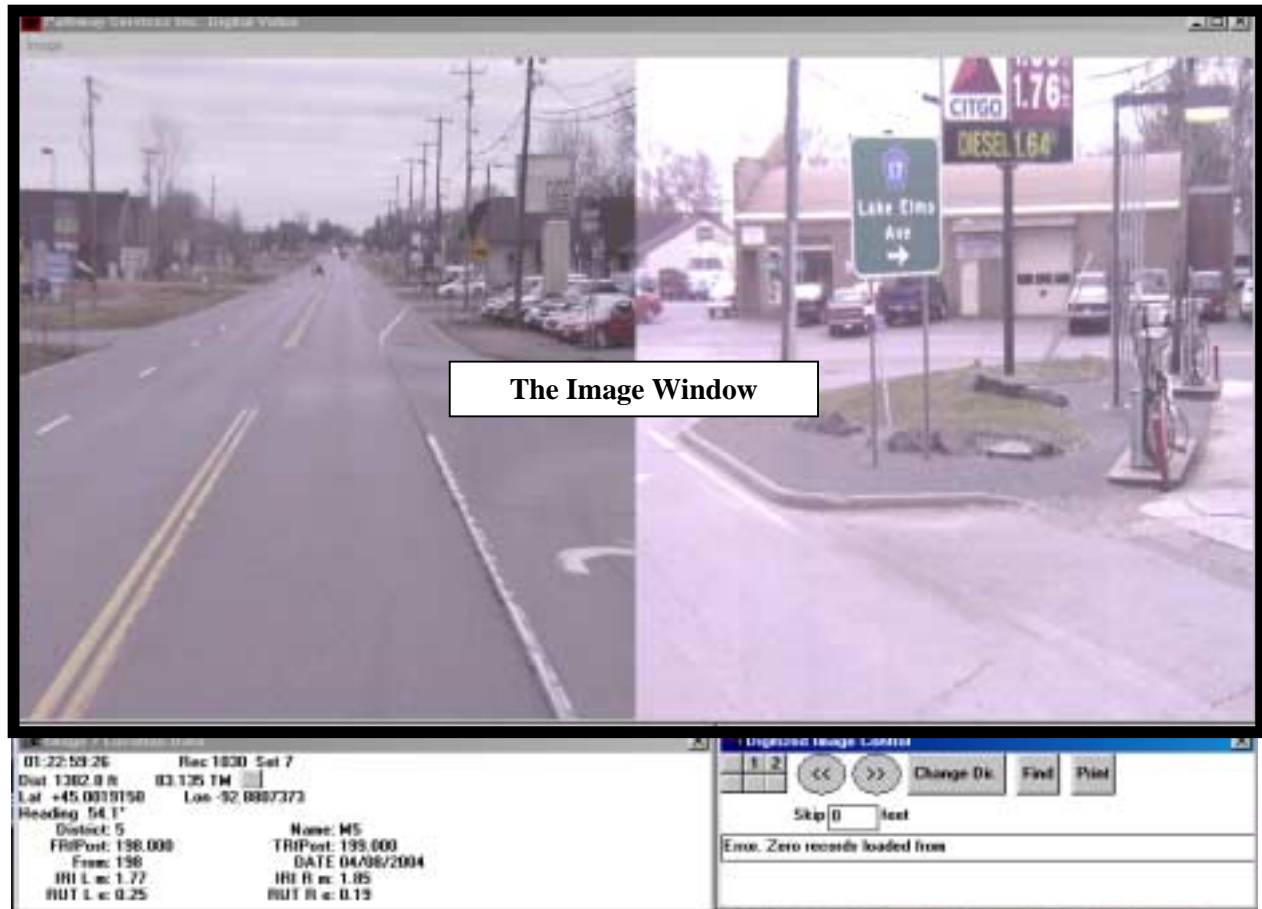

There is one menu item in the Image window. By clicking on the Image in the upper left corner will bring up the Brightness/Contrast controls. Mn/DOT's system uses two images. Image 1 is the front view while image 2 is the side view. Since these are the only two views we have, clicking on the Brightness/Contrast for images 3-6 will do nothing.

## Changing the Image Brightness and/or Contrast

The brightness and contrast can be changed using the Image menu in the Image window. The settings will remain in effect until they are changed, even if the user exits the program. Clicking the Image menu will bring up as shown below:



Once you click on one of the menu choices, the following screen will appear. The image number will be displayed at the top of the box as shown below.

To increase the image Brightness: Click the “Bright +” box repeatedly

To decrease the image Brightness: Click the “Bright -” box repeatedly

To increase the image Contrast: Click the “Bright +” box repeatedly

To decrease the image Contrast: Click the “Bright -” box repeatedly

To restore the image brightness and contrast to its original settings, click on the “Default” box.



The following two images show the result of clicking the “Bright +” button 20 times to increase the Brightness.



## Zooming into the Image

The user can zoom into the image by holding the shift key down while using the mouse to draw a box around the area of interest. Once the mouse button is released, the portion of the image with the box around it will be magnified to the full screen.



In the image below, the bus stop is being zoomed in. Notice that after the zoom, the phone number can easily be read. The zoom feature is useful for reading street signs, billboards and other roadside appurtenances.



**TIP:** To get the best zoomed image make the rectangle wider than it is tall and get the image as close as possible before zooming in.



## The Image / Location Data Window

The Image / Location data window shows the user information about the image(s) being displayed. Information included in the window is the time stamp, record number, tape set number (all used internally by the application to keep track of which images go with each record in the database), distance from beginning of section, in feet, location of current image in either true miles or reference post, latitude and longitude of image location, heading (in degrees), district, beginning and ending Reference Post of section, beginning description, date tested, International Roughness Index (IRI) and average rut depth in the left and right wheelpaths.

The exact information displayed on your PC depends on how the database was setup when it was installed.




## Choosing Between Reference Post to True Miles

Users can change between having the location of the image shown in reference post of true miles (miles from the beginning of the route, usually the state line) by clicking on the small grey square to the right of the location. Clicking this box toggles between reference post (RP) and true miles (TM)



## The Digitized Image Control Window

The digitized image control window is used to choose images, change directions, change locations and/or roadways and to play the movie. This is where you users will spend most of their time while using the video-log application.

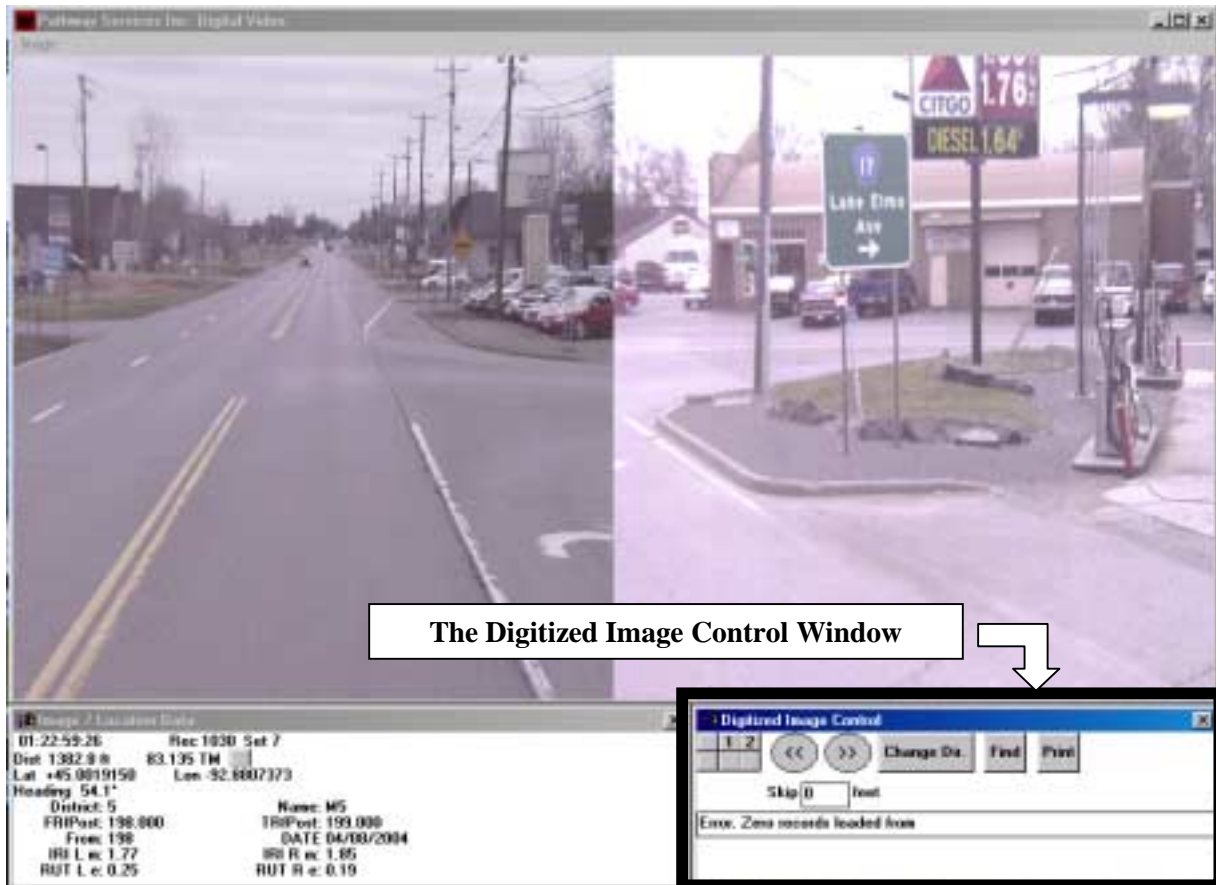In the upper left corner, there are two small boxes with a 1 and a 2 in them. Clicking one of these boxes will shut off the image with that number. Image 1 is the front view while image 2 is the side view.



## Viewing the Images

The VCR buttons,  and , are used to play the images. They can be used two ways, auto-play or manual. Pointing to one of the VCR buttons and clicking the right mouse button will start auto-play, where the images advance automatically. To stop auto-play, simply click the left mouse button while pointing to one of the VCR buttons. Holding the left mouse button down will also activate auto-play, releasing it will stop the images. The most common way of using the VCR buttons is manually. Each time the left mouse button is clicked the images will advance by the distance in the Skip box. If the skip box is 0, the images will advance by the default length. This is generally 25-feet in Metro and 50-feet outstate. The speed at which the images scroll is directly related to the source of the images and the connection speed between your PC and that source. If the images are stored on a district server, any district user will have very quick rollover from one image to the next. If, on the other hand, a district user is accessing the images from the central office server over the T1 line, the initial loading of the database and the scrolling of the images will be much slower.

## Changing the Viewing Interval

The “**Skip**” box is used to jump at longer intervals. For example, in the Metro area, images are taken every 25-feet as the van drives down the road. If the area being studied does not need such frequent images, the user can enter another value in the box. If the user enters 100 in the

box, the images will be displayed every 100-feet as the van drives down the road, skipping 3 out of every 4 images. This gives the impression the vehicle is driving much faster than it is.

## Changing Directions

The “**Change Dir.**” button changes the direction of travel. The next image displayed after clicking this button should be very close to directly opposite the previous image but heading the other way.

## Finding a Certain Location

The “**Find**” button is used to choose another location on the same route or to pick another roadway. Clicking on the find button will bring up the “Choose Location to Find” window. The user must now choose a district, roadway, direction of travel and location. Once OK is clicked the program will display the new image(s). The “Choose Location to Find” window shows the locations in roughly one-mile sections. This is because in addition to video-log data, the data collection van is collecting pavement roughness, cracking, rutting, etc. data on a mile-by-mile basis. The user can choose to find a specific section by choosing one of the sections listed in the window or enter a specific location if it occurs at someplace within one of the sections.

District	Roads	Dir	References	Mile Points
5	M51	D	214.659- 214.325	216.589- 216.255
	M55	I	215.000- 214.659	216.923- 216.589
	M56		216.000- 215.000	217.920- 216.923
	M610		217.000- 216.000	218.916- 217.920
	M62		217.902- 217.000	219.818- 218.916
	M65		219.000- 217.902	220.912- 219.818
	M7		220.000- 219.000	221.910- 220.912
	M77		221.000- 220.000	222.909- 221.910
	M95		222.000- 221.000	223.909- 222.909
	M96		223.000- 222.000	224.913- 223.909
	M97		224.015- 223.000	225.937- 224.913
	U10		225.000- 224.015	226.932- 225.937
	U12		226.000- 225.000	227.930- 226.932

Enter Mile: 224.473

The “Choose Location to Find” window lists the sections in both reference post and true miles. The application will use either reference post or true miles, depending on the units displayed in the Image / Location window.

For example, in the first image on the next page, the units in the Image / Location Data window are set to reference post, as evidence by the 72.208 RP displayed in the second line. If the user clicks on the section from RP 60.000 - 70.000 in the “Choose Location to Find” window, 69.000 appears in the “Enter Mile” box. When the user clicks OK the program finds the image at that location and displays both the front and side images at that location. If the units in the Image /Location Data window were true miles, then when the user clicked on the section from RP 69.000 - 70.000, 69.012 would appear in the “enter Mile” box because that is the location of the beginning of the section in true miles.

A user can also simply enter the location in the “Enter Mile” box to jump to a specific location. Again, the value entered will be the same as the units in the Image / Location Data window, either reference post or true miles. However, since the images are taken at intervals, you are not able to go to every possible location. The program will show you the image taken closest to the location you enter in the “Enter Mile” box.

Pathway Services Inc. Digital Video (Ver. 8.05) M11011

00:28:50.27 Rec 1722 Set 38  
 Dist 1530.6 ft 72.209 RP  
 Lat +44.5413361 Lon -95.1150973  
 Heading 90.5°  
 District: 0 Name: M19  
 FRIPost: 71.922 TRIPost: 72.634  
 From: M END DATE: 06/02/2004  
 IRU L α: 2.81 IRU R α: 2.56  
 RUT L α: 0.06 RUT R α: 0.07

Choose Location to Find

District	Roads	Di	References	Mile Points
0	M104	0	61.000- 62.000	61.004- 61.999
	M15	1	62.000- 63.000	61.999- 63.010
	M19		63.000- 64.000	63.010- 64.011
	M22		64.000- 65.000	64.011- 65.011
	M23		65.000- 66.000	65.011- 66.006
	M24		66.000- 67.000	66.006- 66.991
	M267		67.000- 68.000	66.991- 68.010
	M268		68.000- 69.000	68.010- 69.012
	M269		69.000- 70.000	69.012- 70.014
	M271		70.000- 71.000	70.014- 71.015
	M273		71.000- 71.922	71.015- 71.937
	M274		71.922- 72.634	71.937- 72.629
	M275		72.634- 73.000	72.629- 72.995

Enter Mile 63.000

Cancel OK

Pathway Services Inc. Digital Video (Ver. 8.05) M11011

00:24:45.03 Rec 1719 Set 98  
 Dist 24.8 ft 69.005 RP  
 Lat +44.5414467 Lon -95.1012744  
 Heading 90.0°  
 District: 0 Name: M19  
 FRIPost: 69.000 TRIPost: 70.000  
 From: 063 DATE: 06/02/2004  
 IRU L α: 0.74 IRU R α: 0.73  
 RUT L α: 0.20 RUT R α: 0.06

Results of using "Find"

Digitized Image Control

1 2 << >> Change Di Find Print


Skip 0 feet

## Minimizing the Application

To minimize the application, click on the minimize button in the upper right corner of the Image window. You will have to minimize all other applications before you maximize the application again, otherwise only the image window will be visible.

## Closing the Application

To close the application, click on the "X" box in the "Digitized Image Control" window. This will shut down the entire application. If you click on any of the other "x" boxes, in the Image and Image / Location Data windows, you will have to also close the other windows separately.

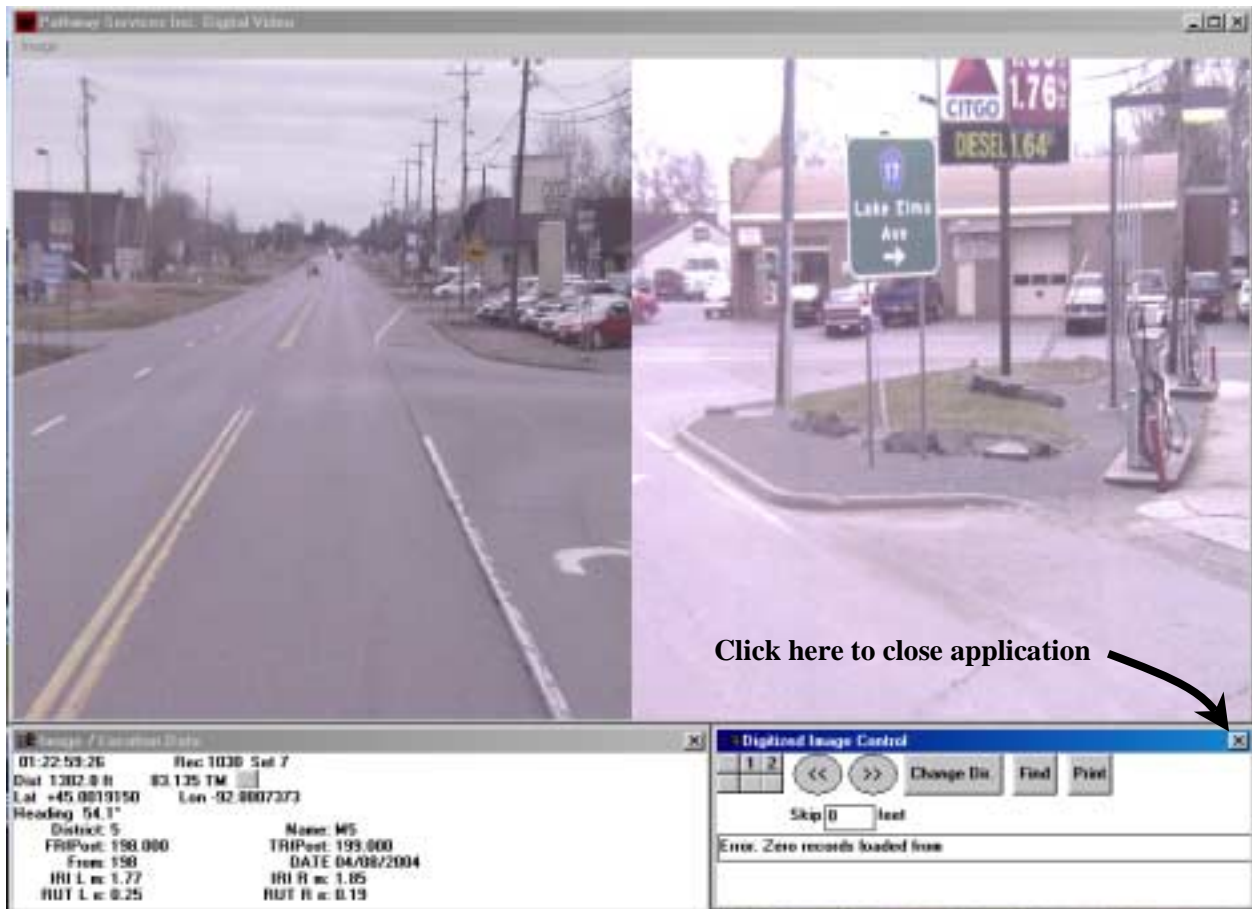

## Making Suggestions for Improvements

User suggestions for improving the application are welcome. Suggestions should be sent to:

David Janisch  
Pavement Management Engineer  
Office of Materials, M.S. 645  
1400 Gervais Avenue  
Maplewood, MN 55109  
(651) 779-5567