



# STRUCTURE CALCULATIONS

For Needs Purposes

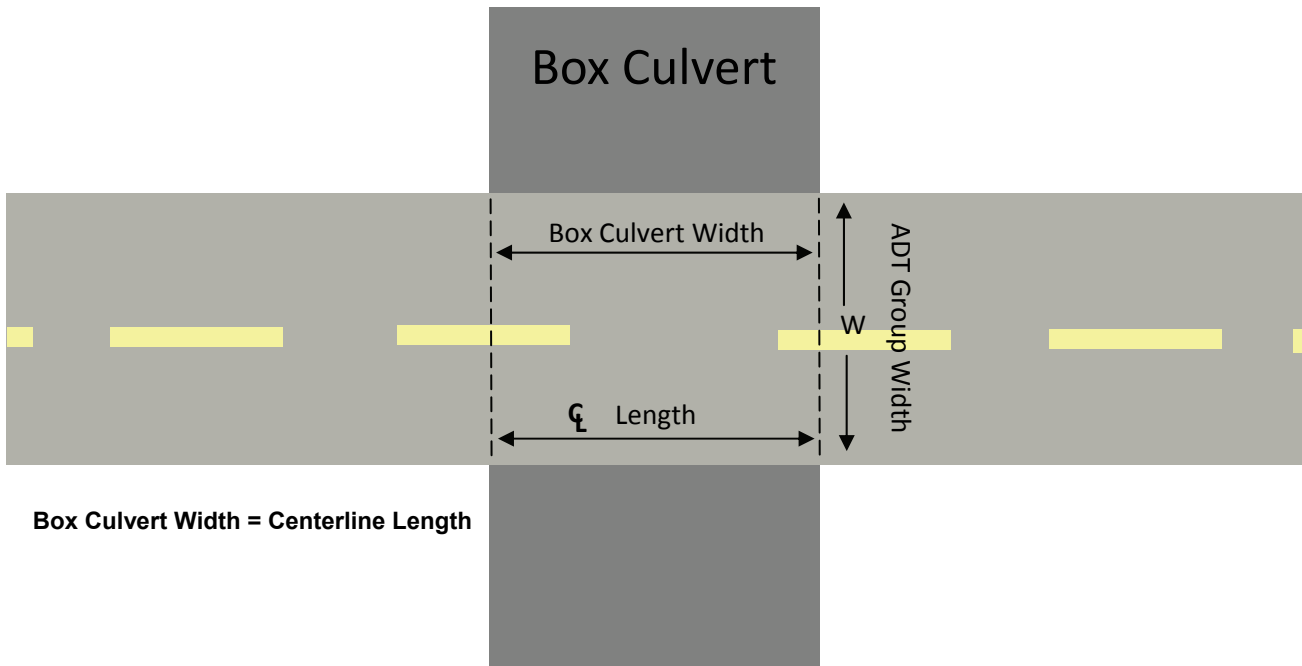

**FORMULA FOR BOX CULVERTS AND BRIDGES (applies to both) =  
CENTERLINE LENGTH x ADT GROUP WIDTH (auto calculated) x UNIT COST**

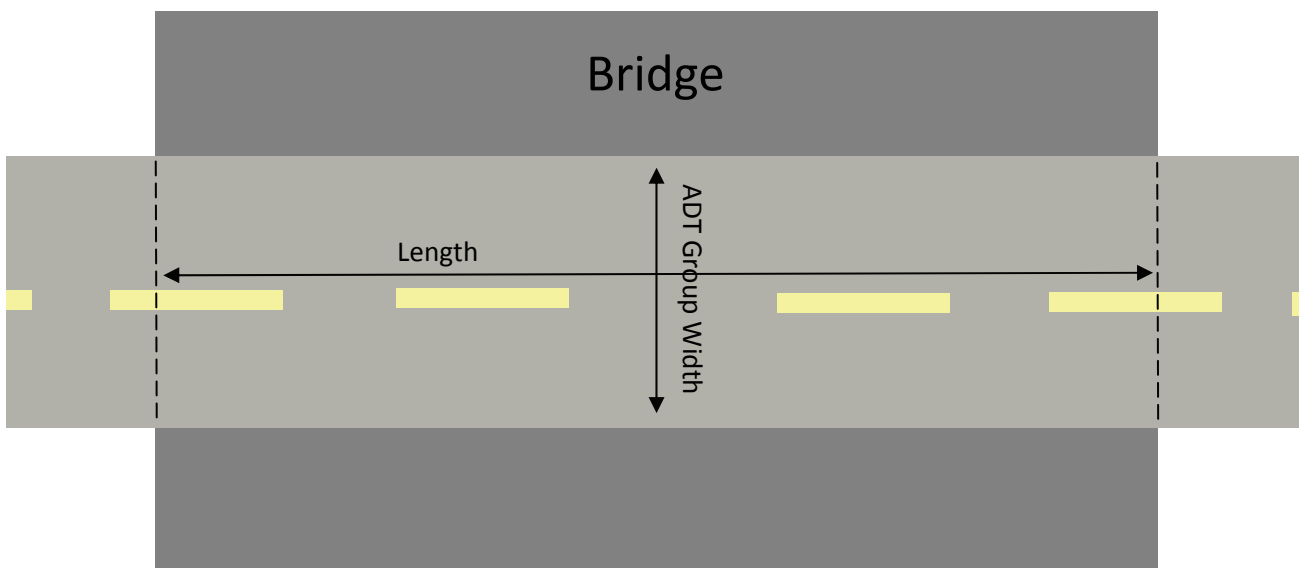

**Bridge Length = Centerline Length**